

## APPENDIX D: *CellStat*<sup>TM</sup> Command Summary

*00		Report system status
*01	**01~	Voice system name (10 seconds)
*02	**02nn	Answer Delay (00 - 99 rings)
*03	**03nn	Access Code (00 = Disabled)
*04	**04HH	Snooze Delay (HH = 00 - 99 Hours)
*05		Recites vocabulary&firmware version

*c1	**c1~	Fault <b>c</b> voice name
*c2	**c2SS	Fault <b>c</b> delay (00 - 99 Seconds)
*c3	**c3l/0	Fault <b>c</b> alarm configuration

*6n	**6np**	Telephone <b>n</b> ( <b>n</b> = 1 to 8)
-----	---------	---

Phone Number	Escape Codes
*0	Tone dial (default)
*1	Pulse dial
*2	2 second pause
*3	Dial numeric pager, wait for answer
*4	Auto acknowledge this call if answered
*5	Dial '*'
*6	Dial '#'
*70	Cellular voice call
*71	Cellular SMS Text Message alert

.....

~	speech (# while recording - mic cut off)
nn	two digit numeric value (00-99)
SS	time value in Seconds format
c	fault input channel number 1-5 (5=pf)
p	0-30 digit phone number, with escape codes



**MICROTEL**  
Technical Support &  
Service  
225/303-0436