

## APPENDIX D: D51T Command Summary

*00		Report system status
*01	**01~	Voice system name (10 seconds)
*02	**02nn	Answer Delay (00 - 99 rings)
*03	**03nn	Access Code (00 = Disabled)
*04	**04HH	Snooze Delay (HH = 00 - 99 Hours)
*05		Recites vocabulary&firmware version
*06	**060/1/2	Control local output

*c1	**c1~	Fault c voice name
*c2	**c2SS	Fault c delay (00 - 99 Seconds)
*c3	**c3l/0	Fault c alarm configuration
*c4	**c4l/0	Fault c Return-To-Normal config
*c5	**c5nn	Fault c Alarm Set Point

*8n	**8np**	Telephone n (n = 1 to 4)
-----	---------	--------------------------

Phone Number Escape Codes	
*0	Tone dial (default)
*1	Pulse dial
*2	2 second pause
*3	Dial numeric pager, wait for answer
*4	Auto acknowledge this call if answered
*5	Dial '*'
*6	Dial '#'

.....

~	speech (# while recording - mic cut off)
nn	two digit numeric value (00-99)
SS	time value in Seconds format
c	fault input channel number 1-5 (5=pf)
p	0-30 digit phone number, with escape codes



**MICROTEL**  
Technical Support &  
Service  
225/303-0436